

## **The Finest Machine Tools**

IL - (630) 321-1500 WI - (262) 789-1600



## Did You Know? Non-conform Material Phase Adjustment

Looking to run or pick off non-round bar stock? Setting the non-conform material phase adjustment function on any Mitsubishi-controlled Citizen-Cincom Swiss is quick and easy. The adjustment orients the main spindle C-axis to the sub spindle C-axis with the push of a button.


The phasing between collets and jobs can change, so orienting and storing shifts automatically will save you time and worry. While in Preparation Mode:

- Pass your material through the main guide bushing and sub spindle
- Press the Non-Conform soft key for the menu shown below
- Press Cycle Start
  - The sub spindle C-axis will orient to the main spindle C-axis

on-conform material phase adjustment	Quit (ESC
Operation Select Phse adj between m sp and GB	Select command item and press [INPUT] key.  1. Phase adj. between main spindle and guide bushing  2. Phase adj. between main spindle and back spindle  3. Phase adj. between main spindle GB,
Pass the material through the spindle and the guide bushing. After that press menu key [Phse adj] and START key simultaneously.	

Want to Learn More? Reach out to an Engineer...

## Miss our Last Tech Tips? Click Below!

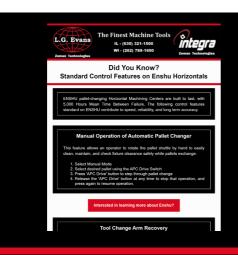



Website Products News Support Contact Us

Tricky Workpiece? Let our Expert Engineers Take a Look...



